


SERIES 5 PIN LAYOUT & WIRING DIAGRAM

1300 779 762
www.vipertrak.com.au

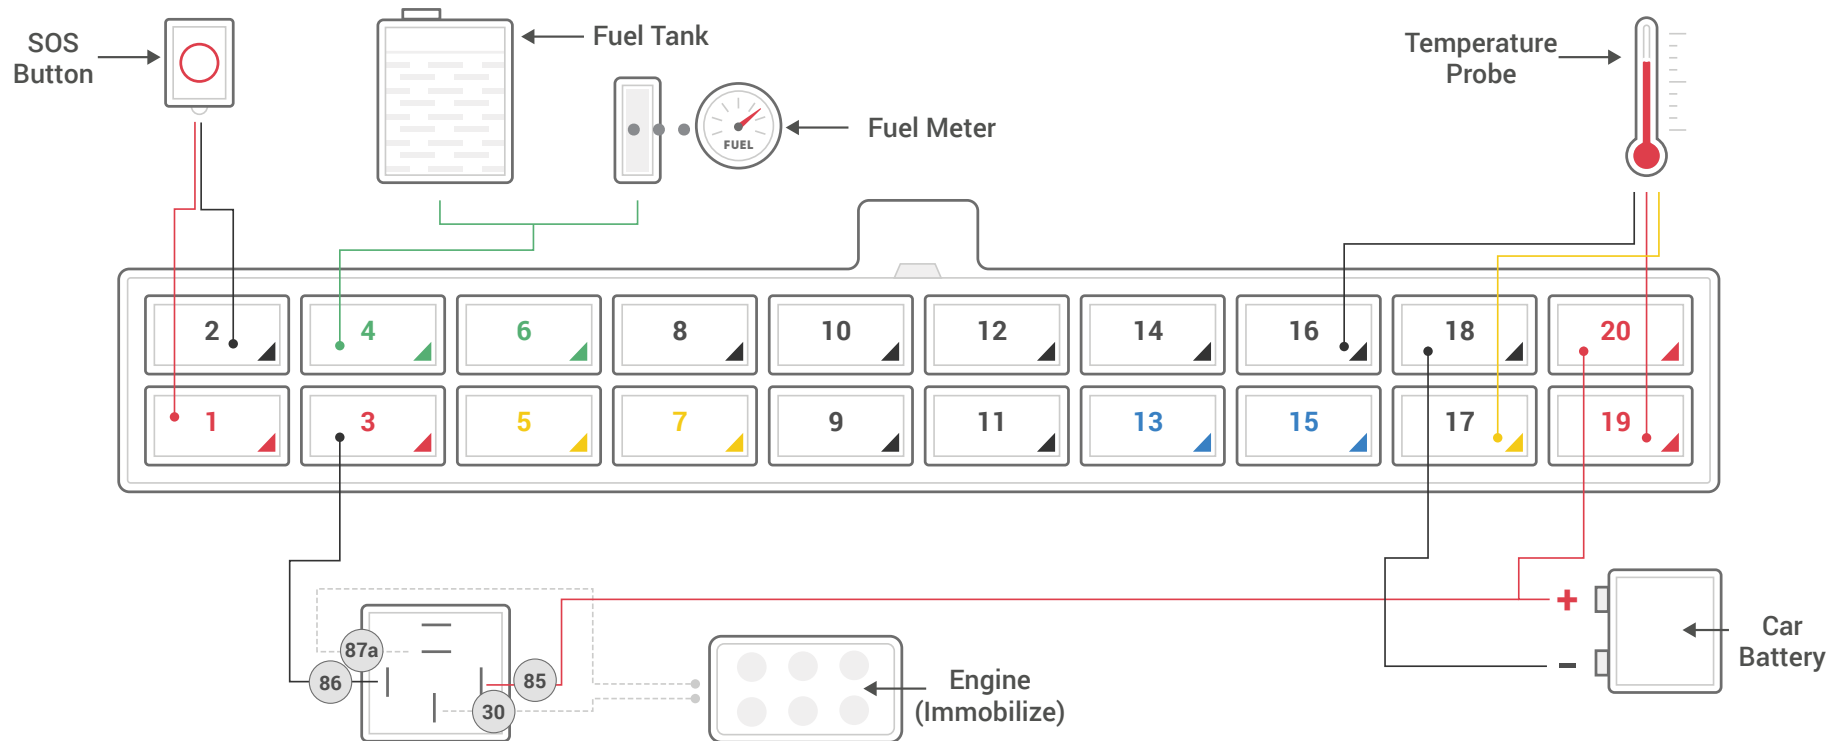

GND	Analog Input 1 <i>(ADB input)</i>	Analog Input 2 <i>(ADB input)</i>	GND	DATA RX	GND	GND	GND	GND	V+ 12v-24v
SOS Button <i>(with GND)</i>	Engine Immobilize <i>(negative)</i>	Door Lock <i>(negative)</i>	Door Unlock <i>(negative)</i>	DATA TX	Door Status <i>(negative)</i>	Digital Input 2 <i>(negative)</i>	Detect Ignition <i>(positive)</i>	Temp. Probe	VCC 5v



Please ensure tracker is wired to constant power to ensure tracker operates while the vehicle is off.



GPS Antenna should ideally have direct line of sight for a reliable signal and be shielded away from objects of interference, e.g. electric motors or metal objects.